



WALL MOUNTING INFRARED QUARTZ HEATER 2000W

MODEL NO: IWMH2003.V3

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to instruction manual



Wear a face shield



Wear protective clothing



Wear protective footwear



Warning: Hot surfaces



Wear protective gloves



Do not cover



Warning! Electricity



Outdoor use only

1. SAFETY

ELECTRICAL SAFETY

- WARNING!** It is the user's responsibility to check the following:
 - Check all electrical equipment and appliances to ensure that they are safe before using.
 - Inspect power supply leads, plugs and all electrical connections for wear and damage.
 - Ensure that the insulation on all cables and on the appliance is safe before connecting it to the power supply.
- DO NOT** use worn or damaged cables, plugs or connectors.
- Ensure that any faulty item is repaired or is replaced immediately by a qualified electrician.
- If the cable or plug is damaged during use, switch off the electricity supply and remove from use.
- Ensure that repairs are carried out by a qualified electrician.**
- Sealey recommend that an RCD (Residual Current Device) is used with all electrical products.
- Important:** Ensure that the voltage rating on the appliance suits the power supply to be used and that the plug is fitted with the correct fuse.
- DO NOT** pull or carry the appliance by the power cable.
- DO NOT** pull the plug from the socket by the cable.
- GENERAL SAFETY**
- Children from age 8 years and above, persons with reduced physical, sensory, or mental capabilities those with lack of experience and knowledge can use the appliance, if they have been given supervision or instruction concerning use of the appliance in a safe way to understand the hazards involved.
- Children shall NOT play with the appliance.
- Cleaning and user maintenance on the appliance shall not be made by children without supervision.
- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children aged from 3 years and less than 8 years shall not plug in, regulate, and clean the appliance or perform user maintenance.
- The appliance shall be disconnected from its power source during service and when replacing parts
- If the removal of the plug is foreseen, the removal of the plug has to be such that an operator can check from any of the points to which he has access that the plug remains removed.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The heater must not be located immediately below a socket outlet.
- WARNING!** Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- WARNING!** In order to avoid overheating, **DO NOT** cover the heater.
- WARNING!** Outdoor use only.
- WARNING!** The heater must be installed at least 1.8m above the floor

2. INTRODUCTION

A totally dry heat, no condensation, no gas, no fumes and no smell. Reaches maximum heat output within seconds of being turned on. Highly polished aluminium reflector for maximum heat efficiency. Adjusts horizontally through 45° while mounted. Three settings, controlled by pull cord, allow unit to be on full, half or low power. Ideal for industrial or domestic applications. Suitable for outdoor use only (IP34 Rated).

3. SPECIFICATION

Model No.: IWMH2000.V3
 Nett Weight: 1.8kg
 Overall Dimensions (W x D x H): 500 x 190 x 320mm
 Plug Type: 3 Pin
 Power Supply Cable: 2m
 Power: 2000W (Three settings 650W, 1300W, 2000W)
 Supply: 230V - 13A


4. INSTALLATION

- ❑ **WARNING!** Be aware of the possible danger of installation close to curtains and other combustible materials.

4.1. WALL MOUNTING (fig.1).

NOTE: The following points should be noted:

- 4.1.1. The heater must be installed at least 1.8m above the floor.
- 4.1.2. The heater should always have a minimum clearance of 450mm from a ceiling and at least 900mm from any object.
- 4.1.3. Ensure that the mounting surface is capable of supporting the weight of the heater.
- 4.1.4. Drill 4 holes, Ø7mm, in wall to mount wall bracket (refer to dimensions fig.1).
- 4.1.5. Place wall plugs (4) in holes.
- 4.1.6. Screw the 4 screws in so that approximately 3mm of thread remains above the fixing surface.
- 4.1.7. Locate the keyholes of the mounting bracket onto the screw heads and slide the unit to the left and then downwards in order to fully engage the screw heads into the four mounting slots.

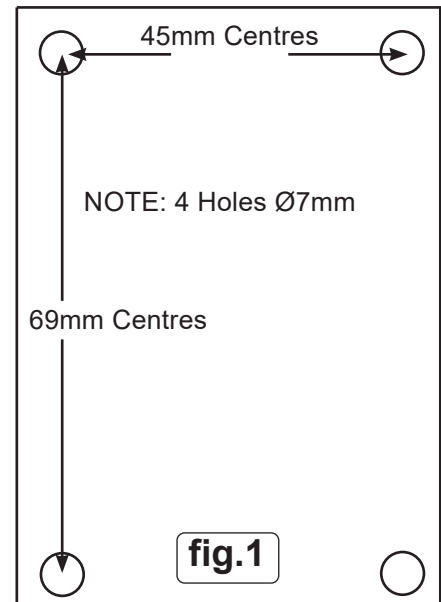

5. OPERATION

- 5.1. The heater has 4 settings 0, 1, 2 and 3. The 0 setting is an off situation. Power settings can be changed by using the pull cord. The value selected is displayed in the window on the front face of the mounting block.
- 5.2. Before connecting the unit to a power supply, ensure the power setting is set to 0.
- 5.3. The heater angle can be adjusted horizontally through a total of 45° while mounted.
- 5.4. To arrange the heater angle to suit the required service, gently but firmly, and using both hands, twist the unit's body to align at the required angle.
- 5.5. Connect the heater to the power supply and turn it on. Select a required heater output by using the pull cord.
 - × **DO NOT** attempt to adjust the angle of the heater unless it been allowed to fully cool.
 - × **DO NOT** use the heater without the grills fitted.
- 5.6. When the heater is not in use switch off the power supply and remove the plug from the supply.

6. MAINTENANCE

NOTE: The unit contains no serviceable components.

- ❑ **WARNING!** Before attempting any maintenance ensure the unit is unplugged from the mains power supply, is cool and on level surface / ground.
- × **DO NOT** touch the element glass, even when cold.
- ✓ If required, wipe the heater's outer surfaces with a slightly damp cloth. **DO NOT** use any solvents.



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



WEEE REGULATIONS

Dispose of this product at the end of its working life in compliance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. Please note that other versions of this product are available. If you require documentation for alternative versions, please email or call our technical team on technical@sealey.co.uk or 01284 757505.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.



REGISTER YOUR PURCHASE HERE

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757500



sales@sealey.co.uk



www.sealey.co.uk