

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to Instructions



Wear Protective Gloves



Wear Eye Protection



Wear a Mask



Wear Protective Clothing



Flammable Material

1. SAFETY

1.1. ELECTRICAL SAFETY

- WARNING!** It is the user's responsibility to check the following:
- ✓ Check all electrical equipment and appliances to ensure that they are safe before using. Inspect power supply leads, plugs and all electrical connections for wear and damage. Sealey recommend that an RCD (Residual Current Device) is used with all electrical products.
- Electrical safety information.** It is important that the following information is read and understood:
- ✓ Ensure that the insulation on all cables and on the appliance is safe before connecting it to the power supply.
- ✓ Regularly inspect power supply cables and plugs for wear or damage and check all connections to ensure that they are secure.
- Important:** Ensure that the voltage rating on the appliance suits the power supply to be used and that the plug is fitted with the correct fuse.
- ✗ **DO NOT** pull or carry the appliance by the power cable.
- ✗ **DO NOT** pull the plug from the socket by the cable.
- ✗ **DO NOT** use worn or damaged cables, plugs or connectors. Ensure that any faulty item is repaired or is replaced immediately by a qualified electrician.

If the cable or plug is damaged during use, switch off the electricity supply and remove from use.

Ensure that repairs are carried out by a qualified electrician.

1.2. GENERAL SAFETY

- WARNING!** Ensure health & safety, local authority, and general workshop practice regulations are adhered to when using this equipment.
- ✓ Familiarise yourself with application and limitations, as well as the specific potential hazards peculiar to the cleaning tank.
- WARNING!** Disconnect the cleaning tank from the mains power before changing accessories, servicing or performing any maintenance.
- ✓ Maintain the cleaning tank in good condition (use an authorised service agent).
- ✓ Replace or repair damaged parts. Use genuine parts only. Unauthorised parts may be dangerous and will invalidate the warranty.
- ✓ Locate the cleaning tank in a suitable working area. Ensure the washer is stood on a firm level surface. Keep area clean and tidy and free from unrelated materials. Ensure the area is well ventilated and has adequate lighting.
- ✓ Keep the cleaning tank away from heat sources such as heater, sparks, open flames etc.
- ✓ Keep the cleaning tank clean. Remove and clean the filter regularly for best and safest performance.
- ✓ Ensure there are no flammable or combustible materials near the work area.
- WARNING!** Always wear approved eye or face protection when operating the cleaning tank.
- ✓ Remove ill fitting clothing. Remove ties, watches, rings, and other loose jewellery, and contain long hair.
- ✓ Wear appropriate protective clothing.
- ✓ Maintain correct balance and footing. Ensure the floor is not slippery and wear non-slip shoes.
- ✓ Keep children and unauthorised persons away from the working area.
- ✓ Avoid accidental starting of the pump by ensuring the unit is unplugged from the mains power when not in use.
- ✓ In case of fire in parts unit, do not attempt to remove parts, or the tank. The lid is fusible and will automatically close to extinguish flames.
- ✗ **DO NOT** modify or jam the cleaning tank lid open, as this will make the fusible fire link inoperative which is dangerous practice and will invalidate the warranty and your insurance.
- ✓ When cleaning parts ensure that nothing in the tank, including any parts basket, is in a position that would prevent the lid from closing fully if and when the fusible link activates.
- ✗ **DO NOT** use any solvent with a flash point below 140°F. We recommend you use Sealey solvent, contact your stockist for details.
- ✗ **DO NOT** use the cleaning tank for any purpose other than for which it is designed.
- ✗ **DO NOT** use cleaning tank in wet or damp locations or areas where there is condensation.
- ✗ **DO NOT** use the cleaning tank where there are flammable liquids, solids or gases such as paint solvents, etc.
- ✗ **DO NOT** allow untrained persons to operate the cleaning tank.
- ✗ **DO NOT** overfill the cleaning tank with solvent.
- ✗ **DO NOT** operate the cleaning tank if any parts are missing or damaged as this may cause failure and/or possible personal injury.
- ✗ **DO NOT** leave the cleaning tank operating unattended.
- ✗ **DO NOT** operate the cleaning tank when you are tired or under the influence of alcohol, drugs or intoxicating medication.
- ✗ The tank is not suitable for paint thinners, gun wash or air drying.
- ✓ When not in use switch the cleaning tank off, remove plug from the power supply.
- ✓ Dispose of waste liquids in accordance with national and local authority regulations.
- WARNING! DO NOT** allow uncontrolled discharge of fluids thus polluting the environment.
- WARNING!** The warnings, cautions and instructions discussed in this manual cannot cover all possible conditions and situations that may occur. It must be understood that common sense and caution are factors which cannot be built into this product, but must be applied by the operator.

2. INTRODUCTION

One-piece tank construction with triple baked enamel finish and fitted with fully sealed, magnetic drive pump unit. Fluid recirculated through replaceable filter element and directed onto workpiece through flexible metal delivery nozzle. Large capacity tank is suitable for cleaning larger engine components with up to 80L maximum working capacity. Lid of tank fitted with fusible link which automatically snaps lid shut in the event of a fire. Supplied with removable shelf and parts basket.

3. SPECIFICATION

MODEL NO:	SM40.V2		
Fuse Rating:	3A	Plug Type:	3-Pin
Max / Min Working Capacity:	80L/ 57L	Power Supply Cable Length:	1.6m
Motor Power:	25W	Pump Output/hr:	200L
Nett Weight:	42.4kg	Supply:	230V
Overall Dimensions (W x D x H):	1090 x 520 x 890mm	Tank Dimensions (W x D x H):	1090 x 520 x 270mm

4. ASSEMBLY

4.1. UNPACKING

4.1.1. Check contents in the course of unpacking the tank. Should there be any damaged or missing parts contact the supplier immediately.

4.2. ASSEMBLY

4.2.1. Open carton and remove lower shelf. Open lid and remove the pump housing set, form the inner box, parts basket and legs from the tub. Close lid of tub and close carton flaps.

4.2.2. Carefully turn the carton with unit upside down (in order to protect against scratching the unit) and open the bottom of carton.

4.2.3. Assemble legs to the brackets on the bottom of the tub with pan screws, spring washers and hex nuts, (hand tight only).

4.2.4. Set the lower shelf between the four legs and fix with pan screws, spring washer and hex nuts. Level the shelf and tighten screws.

4.2.5. Now tighten the leg screws and turn assembled unit up correct way onto its legs and remove the outer carton.

4.2.6. Position unit according to safety instructions in chapter 1.

4.2.7. Open lid and place the electrical pump housing through the rectangular hole on the side of tub.

4.2.8. Place the work shelf onto the two welded supports inside the tank.

4.2.9. Screw the 90O connector into the welded bolt on pump housing, then fit the tube to the 90O connector.

4.2.10. Check that the tank drain plug is correctly inserted and tightened.

4.2.11. Place the parts basket on work shelf. Check your installation to ensure the unit is ready for use.

5. OPERATION

WARNING! Ensure you have read, understood and apply section 1 safety instructions before using the cleaner.

5.1. Check that the pump power switch is in the off position, and that the unit is unplugged from the mains power supply.

5.2. Fill the tank to appropriate capacity with Sealey solvent, or a general purpose degreaser (contact your local dealer for supply).

* **DO NOT** use any other type of solvent.

CAUTION! Ensure you follow any instructions provided with the solvent.

5.3. Plug the washer into the mains power supply and switch the unit on. Check that solvent flows freely through the flexible spigot.

5.4. Place parts to be cleaned into the cleaning basket. Direct spray nozzle onto parts. Ensure any splash back stays inside the tank. If not reposition the spray nozzle. For ground-in marks, leave the parts to soak in the bottom of the tank. Brush parts with cleaning brush if required. Turn off the pump and leave the parts to drain either in the basket or, if too large, on the shelf.

5.5. When complete turn the washer off and unplug from the mains power supply.

WARNING! DO NOT allow uncontrolled discharge of fluids thus polluting the environment. Dispose of waste liquids in accordance with local authority regulations.

5.6. Keep the cleaning tank clean. Remove and clean the filter regularly for best and safest performance.

WARNING! When cleaning parts, ensure that nothing in the tank, including any parts basket, is in a position that would prevent the lid from closing fully if, and when, the fusible link activates.



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



REGISTER YOUR PURCHASE HERE



WEEE REGULATIONS

Dispose of this product at the end of its working life in compliance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. Please note that other versions of this product are available. If you require documentation for alternative versions, please email or call our technical team on technical@sealey.co.uk or 01284 757505.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757500



sales@sealey.co.uk



www.sealey.co.uk