


Parts Information: **Industrial Infrared Diesel Heater 13kW** Model No: IR13.V2

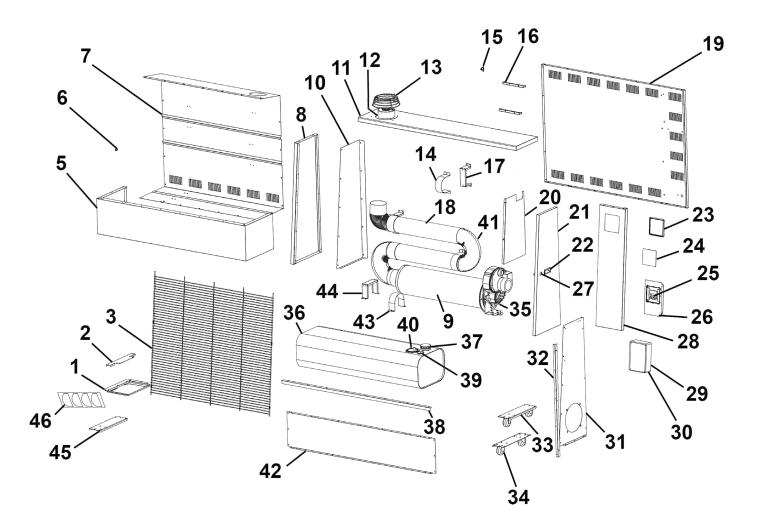

Item	Part No.	Description
1	IR16.01	Support Tank for Oil Tank
2	IR16.02	Connection Plate
3	IR13.03	Front Guard (For IR13 Only)
5	IR16.05	Base
6	IR16.06	Cable Grip
7	IR13.07	Inside Plate (For IR13 Only)
8	IR13.08	Left Side Plate
9	IR16.09	Exhuast Pipe Sleeve
10	IR13.10	Left Inside Plate
11	IR13.11	Top Cover (For IR13 Only)
12	IR13-12	Exhaust Pipe Seat
13	IR13-13	Protection Grille
14	IR13-14	Pipe Clamp

01284 757500

Item	Part No.	Description
15	IR16.15	Thermostat
16	IR16.16	Bracket for Electrical Box
17	IR16.17	Pipe Bracket (A)
18	IR16.18	Pipe (Short)
19	IR16.19	Rear Panel
20	IR13.20	Heat Resistance Plate (For IR13 Only)
21	IR13.21	Right Side Plate
22	IR16.22	Handle (for Side Door)
23	IR16.23	Decorative Cover
24	IR16.24	Label (for Control Panel)
25	IR16.25	Control Panel PCB
	IR16-25-02	Control Panel (Not Shown)
	IR16-25-04	Socket Adaptor (Not Shown)

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. There may be alternative versions of this product, please contact us should you require this information.

IMPORTANT: No liability is accepted for incorrect use of product. Spare parts must be fitted by a competent person

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR www.sealey.co.uk sales@sealey.co.uk

IR13.V2 Issue 2 DPL 8/10/24



Parts Information: Industrial Infrared Diesel Heater 13kW Model No: IR13.V2

Item	Part No.	Description	Item	Part No.
	IR16-25-05	Wire Assembly (Not Shown)		IR16-35-11
	IR16-25-06	Red PVC Wire Lead (Not Shown)		IR16-35-12
	IR16-25-07	Black PVC Wire Lead (Not Shown)		IR16-35-14
	IR16-25-08	Detection Wire Set (Not Shown)		IR16-35-15
	IR16-25-09	Stop Detection Wire Set (Not Shown)		IR16-35-16
	IR16-25-10	Oil Float Assembly (Not Shown)		IR16-35-17
	IR16-25-11	Temperature Sensor Wire (Npt Shown)		IR16-35-18
26	IR16.26	Control Box		IR16-35-19
27	IR16.27	Lock & Key		IR16-35-20
28	IR13-V2-28	Front Panel	36	IR16.36
29	IR16.29	Power Control PCB	37	IR16.37
30	IR16.30	Base for Control Panel	38	IR16.38
31	IR13.31	Right Inside Panel	39	IR16.39
32	IR16.32	Connection Plate (for Inside Panel)	40	IR16.40
33	IR16.33	Castor Wheel Plate	41	IR13-41
34	IR16-V2-34	Castor	42	IR16.42
35	IR16.35	Oil Tank Assembly	43	IR16.43
	IR16-35-02	Electromagnetic Pump (Not Shown)	44	IR16.44
	IR16-35-03	Connector 4mm (Not Shown)	45	IR16.45
	IR16-35-05	Capacitor for Motor (Not Shown)	46	IR16.46
	IR16-35-06	Ignition Needle Assembly (Not Shown)		IR16-47
	IR16-35-07	High Voltage Package (Not Shown)		IR16-48
	IR16-35-08	Photocell Assembly (Not Shown)		IR16-F
	IR16-35-09	Electromagnetic Fuel Rtn Valve (Not Shown)		IR13-V2-PC
	IR16-35-10	Injector Nozzle Seat (Not Shown)		

	[
Item	Part No.	Description
	IR16-35-11	Nozzle 0.40gph 60h (Not Shown)
	IR16-35-12	Nozzle 0.30gph 60h (Not Shown)
	IR16-35-14	Fan Wheel (Not Shown)
	IR16-35-15	Copper Pipe (Not Shown)
	IR16-35-16	Flame Plate (Not Shown)
	IR16-35-17	Motor (Not Shown)
	IR16-35-18	Oil Filter Plug (Not Shown)
	IR16-35-19	Copper Pipe (Not Shown)
	IR16-35-20	Temperature Control (Not Shown)
36	IR16.36	Fuel Tank Assembly
37	IR16.37	Tank Cap (c/w Oil Filter)
38	IR16.38	Decorative Plate
39	IR16.39	Vent Plug
40	IR16.40	Sensor
41	IR13-41	Pipe (Middle Section)
42	IR16.42	Lower Front Panel
43	IR16.43	Pipe Clamp
44	IR16.44	Pipe Bracket
45	IR16.45	Connection Plate
46	IR16.46	Muffler Plate
	IR16-47	Toolbox Lock, c/w Key (Not Shown)
	IR16-48	Elbow Funnel (Not Shown)
	IR16-F	Filter (Not Shown)
	IR13-V2-PC	Pipe Connector for Electro-Valve (Not Shown)

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. There may be alternative versions of this product, please contact us should you require this information.

IMPORTANT: No liability is accepted for incorrect use of product. Spare parts must be fitted by a competent person

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR