



Item	Part No.	Description
1	IR16.01	Support Tank for Oil Tank
2	IR16.02	Connection Plate
3	IR16.03	Front Guard (IR16 ONLY)
5	IR16.05	Base
6	IR16.06	Cable Grip
7	IR16.07	Inside Plate (IR16 ONLY)
8	IR16.08	Left Side Plate
9	IR16.09	Exhaust Pipe Sleeve
10	IR16.10	Left Inside Plate
11	IR16.11	Top Cover (IR16 ONLY)
12	IR16.12	Pipe Clamp
13	IR16.13	Exhaust Pipe Seat
14	IR16.14	Protection Grille
15	IR16.15	Thermostat
16	IR16.16	Bracket for Electrical Box

Item	Part No.	Description
17	IR16.17	Pipe Bracket (A)
18	IR16.18	Pipe (Short)
19	IR16.19	Rear Panel
20	IR16.20	Heat Resistance Plate (IR16 ONLY)
21	IR16.21	Right Side Plate
22	IR16.22	Handle (For Side Door)
23	IR16.23	Decorative Cover
24	IR16.24	Label (For Control Panel)
25	IR16.25	Control Panel
26	IR16.26	Control Box
27	IR16.27	Lock & Key
28	IR16-V2-28	Front Panel
29	IR16.29	Power Control PCB
30	IR16.30	Base for Control Panel
31	IR16.31	Right Inside Panel

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. There may be alternative versions of this product, please contact us should you require this information.

IMPORTANT: No liability is accepted for incorrect use of product. Spare parts must be fitted by a competent person

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.



Parts Information:
Industrial Infrared Diesel Heater 16kW
Model No: IR16.V2

Item	Part No.	Description
32	IR16.32	Connection Plate (For Inside Panel)
33	IR16.33	Castor Wheel Plate
34	IR16-V2-34	Wheel, Swivel Castor, 4-Bolt Fixing, Red (D: 63 W: 30 B: 8 H)
35	IR16.35	Oil Tank Assembly
36	IR16.36	Fuel Tank Assembly
37	IR16.37	Tank Cap (c/w Oil Filter)
38	IR16.38	Decorative Plate
39	IR16.39	Vent Plug
40	IR16.40	Sensor
41	IR16.41	Pipe (Middle Section)
42	IR16.42	Lower Front Panel
43	IR16.43	Pipe Clamp
44	IR16.44	Pipe Bracket
45	IR16.45	Connection Plate
46	IR16.46	Muffler Plate (Not Shown)
--	IR16-V2-34B	Wheel, Swivel Castor, 4-Bolt Fixing (w/ Brake) (D: 63 W: 30 B) (Not Shown)
--	IR16-47	Toolbox Lock (c/w Key) (Not Shown)
--	IR16-48	Elbow Funnel (Not Shown)
--	IR16-F	Filter (Not Shown)
--	IR16-25-02	Control Panel (Not Shown)
--	IR16-25-03	Power Board (Not Shown)
--	IR16-25-04	Socket Adaptor (Not Shown)
--	IR16-25-05	Wire Assembly (Not Shown)

Item	Part No.	Description
--	IR16-25-06	Red PVC Wire Lead (Not Shown)
--	IR16-25-07	Black PVC Wire Lead (Not Shown)
--	IR16-25-08	Detection Wire Set (Not Shown)
--	IR16-25-09	Stop Detection Wire Set (Not Shown)
--	IR16-25-10	Oil Float (Not Shown)
--	IR16-25-11	Temperature Sensor Wire (Not Shown)
--	IR16-35-02	Electromagnetic Pump (Not Shown)
--	IR16-35-03	Connector 4mm (Not Shown)
--	IR16-35-05	Capacitor for Motor (Not Shown)
--	IR16-35-06	Ignition Needle Assembly (Not Shown)
--	IR16-35-07	High Voltage Package (Not Shown)
--	IR16-35-08	Photocell Assembly (Not Shown)
--	IR16-35-09	Electromagnetic Fuel Return Valve (Not Shown)
--	IR16-35-10	Socket Adaptor (Male) (Not Shown)
--	IR16-35-11	Nozzle 0.40gph 60h (Not Shown)
--	IR16-35-12	Nozzle 0.30gph 60h (Not Shown)
--	IR16-35-14	Fan Wheel (Not Shown)
--	IR16-35-15	Copper Pipe (Not Shown)
--	IR16-35-16	Flame Plate (Not Shown)
--	IR16-35-17	Motor (Not Shown)
--	IR16-35-18	Oil Filter Plug (Not Shown)
--	IR16-35-19	Oil Inlet & Copper Pipe (Not Shown)
--	IR16-35-20	Temperature Control (Not Shown)

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. There may be alternative versions of this product, please contact us should you require this information.

IMPORTANT: No liability is accepted for incorrect use of product. Spare parts must be fitted by a competent person

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757500



sales@sealey.co.uk



www.sealey.co.uk